



Robert Bosch GmbH

Power Tools Division 70745 Leinfelden-Echterdingen Germany

www.bosch-pt.com

1609 929 Y67 (2011.09) O / 63 UNI



AL

2204 CV | 2215 CV



BOSCH

- de Originalbetriebsanleitung
- en Original instructions
- fr Notice originale
- es Manual original
- pt Manual original
- it Istruzioni originali
- **nl** Oorspronkelijke gebruiksaanwijzing
- da Original brugsanvisning
- sv Bruksanvisning i original
- no Original driftsinstruks
- fi Alkuperäiset ohjeet

- **el** Πρωτότυπο οδηγιών χρήσης
- tr Orijinal işletme talimatı
- pl Instrukcja oryginalna
- cs Původní návod k používání
- **sk** Pôvodný návod na použitie
- hu Eredeti használati utasításru Оригинальное руководство по
- эксплуатации **uk** Оригінальна інструкція з
- експлуатації
- ro Instrucțiuni originale bg Оригинална инструкция

- sr Originalno uputstvo za rad
 - l Izvirna navodila
- **hr** Originalne upute za rad
- et Algupärane kasutusjuhend
- lv Instrukcijas oriģinālvalodā
- It Originali instrukcija
- تعليمات التشغيل الأصلية ar












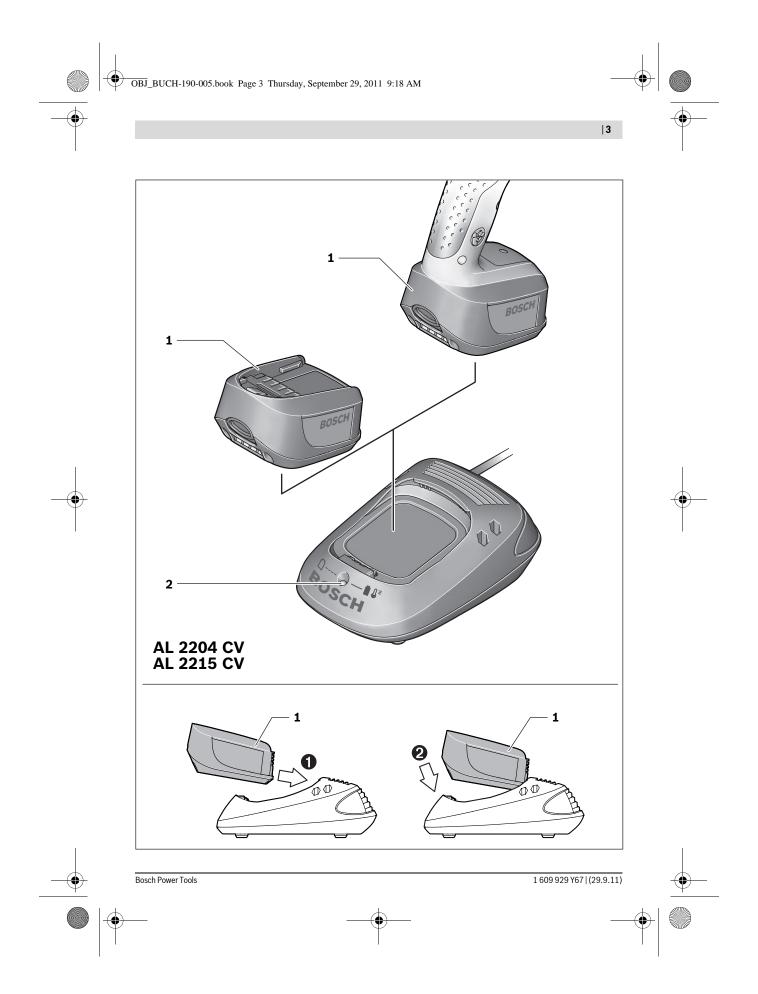









Entsorgung

Ladegeräte, Zubehör und Verpackungen sollen einer umweltgerechten Wiederverwertung zugeführt werden.

Werfen Sie Ladegeräte nicht in den Hausmüll!

Nur für EU-Länder:



Gemäß der Europäischen Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte und ihrer Umsetzung in nationales Recht müssen nicht mehr gebrauchsfähige Ladegeräte getrennt gesammelt und einer umweltgerechten Wiederverwertung zugeführt werden.

Änderungen vorbehalten.

English

Safety Notes



Keep the battery charger away from rain or **moisture.** Penetration of water in the battery charger increases the risk of an electric shock.

- ▶ Only charge Bosch lithium ion batteries or batteries installed in Bosch products with the voltages listed in the technical data. Otherwise there is danger of fire and ex-
- ► Keep the battery charger clean. Contamination can lead to danger of an electric shock.
- ▶ Before each use, check the battery charger, cable and plug. If damage is detected, do not use the battery charger. Never open the battery charger yourself. Have repairs performed only by a qualified technician and only using original spare parts. Damaged battery chargers, cables and plugs increase the risk of an electric shock.
- ▶ Do not operate the battery charger on easily inflammable surfaces (e.g., paper, textiles, etc.) or surroundings. The heating of the battery charger during the charging process can pose a fire hazard.
- ▶ In case of damage and improper use of the battery, vapours may be emitted. Provide for fresh air and seek

medical help in case of complaints. The vapours can irritate the respiratory system.

- ▶ Supervise children. This will ensure that children do not play with the charger.
- ▶ Children or persons that owing to their physical, sensory or mental limitations or to their lack of experience or knowledge, are not capable of securely operating the charger, may only use this charger under supervision or after having been instructed by a responsible person. Otherwise, there is danger of operating errors and injuries.

Products sold in GB only: Your product is fitted with an BS 1363/A approved electric plug with internal fuse (ASTA approved to BS 1362).

If the plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place by an authorised customer service agent. The replacement plug should have the same fuse rating as the original plug.

The severed plug must be disposed of to avoid a possible shock hazard and should never be inserted into a mains socket elsewhere.

Product Description and Specifications





Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious inju-

Save these instructions.

Use the battery charger only when you fully understand and can perform all functions without limitation, or have received appropriate instructions.

Product Features

The numbering of the product features refers to the illustration of the battery charger on the graphics page.

- 1 Battery*
- 2 Green battery charge indicator

*Accessories shown or described are not part of the standard delivery scope of the product. A complete overview of accessories can be found in our accessories program.

Technical Data

Battery Charger		AL 2204 CV	AL 2215 CV
Article number		2 607 225 2	2 607 225 4
Output voltage (automatic voltage detection)	V	14.4 - 21.6	14.4 - 21.6
Charging current	mA	430	1500
Allowable charging temperature range	°C	0 – 45	0 – 45
Charging time for battery capacity, approx.			
- 1.0 Ah	min	150	45
- 1.3 Ah	min	180	55
- 1.5 Ah	min	207	63
Please observe the article number on the type plate of your battery charger. The trade nam	es of individ	ual battery chargers ma	y vary.

1 609 929 Y67 | (29.9.11) Bosch Power Tools















 












Operation

Starting Operation

▶ Observe the mains voltage! The voltage of the power supply must correspond with the data given on the name-plate of the battery charger. Battery chargers marked with 230 V can also be operated with 220 V.

Charging Procedure

The charging procedure starts as soon as the mains plug of the battery charger is inserted into the socket and the battery **1** or the power tool with the slid on battery **1** is inserted on the battery charger. The power tool cannot be switched on during charging.

Firstly, place the battery **1** as shown in the figure onto the front of the battery charger (**0**) and then press the battery **1** down at the rear (**0**). To remove the battery, proceed in reverse order.

Due to the intelligent charging method, the charging condition of the battery is automatically detected and the battery is charged with the optimum charging current, depending on battery temperature and voltage.

This gives longer life to the battery and always leaves it fully charged when kept in the charger for storage.

Note: The charging procedure is only possible when the battery temperature is within the allowable charging temperature range, see Section "Technical Data".

Meaning of the Indication Elements

Flashing Battery Charge Indicator 2



The charging procedure is signalled by a **flashing** battery charge indicator **2**.

Continuous Lighting of the Battery Charge Indicator 2



Continuous lighting of the battery charge indicator **2** indicates that the battery is fully charged **or** that the temperature of the battery is not with-

in the allowable charging temperature range, and cannot be charged for this reason. The battery is charged as soon as the allowable charging temperature range is reached.

When the battery is not inserted, **continuous lighting** of the battery charge indicator **2** indicates that the mains plug is inserted in the socket and that the battery charger is ready for operation.

Troubleshooting - Causes and Corrective Measures

Cause Corrective Measure

ouuse	OUL COULT MICUSULO		
Continuous lighting of	f the battery charge indicator 2		
No charging procedure possible			
Battery not (properly) inserted	Properly insert battery into battery charger		
Battery contacts contaminated	Clean the battery contacts (e.g. by inserting and removing the battery several times) or replace the battery		
Battery defective	Replace the battery		
Battery charge indica	tor 2 does not light up		
Mains plug of battery charger not plugged in (properly)	Insert mains plug (fully) into the socket outlet		
Socket outlet, mains cable or battery charger defective	Check the mains voltage; have the battery charger checked by an au- thorised after-sales service agent for Bosch power tools		

Working Advice

With continuous or several repetitive charging cycles without interruption, the charger can warm up. This is not meaningful and does not indicate a technical defect of the battery charger. A significantly reduced working period after charging indicates that the battery is used and must be replaced.

Maintenance and Service

Maintenance and Cleaning

If the replacement of the supply cord is necessary, this has to be done by Bosch or an authorized Bosch service agent in order to avoid a safety hazard.

If the battery charger should fail despite the care taken in manufacturing and testing procedures, repair should be carried out by an authorised after-sales service agent for Bosch power tools.

In all correspondence and spare parts orders, please always include the 10-digit article number on the type plate of the battery charger.

After-sales Service and Customer Assistance

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. Exploded views and information on spare parts can also be found under:

www.bosch-pt.com

Our customer service representatives can answer your questions concerning possible applications and adjustment of products and accessories.















