

DRAPER®

INSTRUCTIONS FOR Digital Tyre Gauge

Stock No.73183 Part No.DTG1

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



DRAPER®

GENERAL INFORMATION

This manual has been compiled by Draper Tools and is an integrated part of the product with which it is enclosed and should be kept with it for future references.

This manual describes the purpose for which the product has been designed and contains all the necessary information to ensure its correct and safe use. We recommend that this manual is read before any operation or, before performing any kind of adjustment to the product and prior to any maintenance tasks. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

The Draper Tools policy of continuous improvement determines the right to change specification without notice.

Stock no	73183
Part no	DTG1
Range:	2.0-99.5psi
.....	0.15-7.00 bar
.....	15-700kPA
Power	1 x CR2032
Display back light	2 x LR44
Display	1/4" (6.35mm) LCD
Temperature range	0-40°C

- Self calibrating.
- Low power consumption auto shut off.

IMPORTANT:

- Always be sure to follow manufacturer's recommended pressure ratings.
- Always check pressure when tyres are cold.

1. Press the 'ON/OFF' button. Wait for "0" display.
2. Repeatedly press the 'ON/OFF' button to cycle through the different scales. Select from PSI, BAR or KPA.
3. Place the gauge nozzle onto your tyre valve.
4. Ensure a good seal exists between the nozzle and the valve by pressing firmly, checking that no hissing sound of escaping air can be heard. Remove gauge nozzle from valve and read the pressure reading on the display.
5. Press 'ON/OFF' button for approx. 3 seconds to switch the gauge off.

- No adjustments can be made, but the battery should be replaced by a competent person.

To access the batteries, remove the two screws and carefully separate the two halves of the housing. Ensure the correct polarity is observed.

- To clean, use a soft damp cloth. Do not immerse in or spray water, other liquids or abrasive cleaners on the gauge

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.

- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Internet:** www.draper.co.uk
- **E-mail:** sales@drapertools.com
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355

- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs,
please contact the Draper Tools Helpline for
details of an agent in your local area.

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.