



Impact Shredder (THIS)

1	TH101-9113-65002	Warning sticker	39	TH101-9SBABC04-40	Screw
2	TH101-9151-650001	Feeder hopper	40	TH101-9131-650001	Filter
3	TH101-9053-650006	Scaprs defend block	41	TH101-9027-650001	Connecting wire 1
4	TH101-9150-650001	clamp bar	42	TH101-9027-650002	Connecting wire 2
5	TH101-9SBABC4.2-20	Screw	43	TH101-9032-650002	Electionmagnetic switch
6	TH101-9114-650001	Logo	44	TH101-9092-650001	Overcurrent protection
7	TH101-9001-650001	Up housing	45	TH101-9113-650001	Data sticker
8	TH101-9053-650005	Bolt frame plate	46	TH101-9142-650001	Motor cover
9	TH101-9SBABC04-10	Screw	47	TH101-9033-620001	Capacitor
10	TH101-9WSB-4	Spring washer 2	48	TH101-9022-650001	Fan
11	TH101-9030-650001	Switch pin	49	TH101-9023-650002	Shaft sheath
12	TH101-9057-650001	Push stick	50	TH101-9DB-6080Z	Bearing
13	TH101-9SBABC05-20	"H" type screw	51	TH101-9SBABC04-75	Screw
14	TH101-9SBABC08-30	Screw	52	TH101-9039-650001	Motor support
15	TH101-9WSB-08	Spring washer 1	53	TH101-9005-650001	Field
16	TH101-9072-650001	Clamp block	54	TH101-9013-650001	Amature
17	TH101-USE TH101-9132-650001	Screw	55	TH101-9DB-62010Z	Bearing
18	TH101-9132-650001	Blade Set Inc Screws	56	TH101-9030-650005	Washer
19	TH101-9139-650001	Blade plate	57	TH101-9031-650004	Small belt wheel
20	TH101-9072-650002	Drive block	58	TH101-9053-650002	Wind defend board
21	TH101-9053-650008	Blade defend block	59	TH101-9138-650001	Plastic pin
22	TH101-9057-650003	Pull bar	60	TH101-9069-650003	Down cover of gear box
23	TH101-9030-650004	Washer 3	61	TH101-9DB-6290Z	Bearing
24	TH101-9NCN04	Nut	62	TH101-9031-650003	Eccentric wheel
25	TH101-9SBABC4.2-18	Screw	63	TH101-9031-650002	Big belt wheel
26	TH101-9002-650001	Down housing	64	TH101-9047-650001	Belt
27	TH101-9058-650001	Knob	65	TH101-9069-650002	UP cover of gear box
28	TH101-9060-650001	Spring	66	TH101-9DB-60030Z	Bearing
29	TH101-9030-650002	Internal took closing ring	67	TH101-9098-650001	Spanner
30	TH101-9075-650001	Fixup nut	68	TH101-9069-650001	Wheel cover
31	TH101-9053-650007	Nut frame plate	69	TH101-9NCN-08	Hex nut
32	TH101-9NAN-04	Hex nut	70	TH101-9030-650003-70	Washer
33	TH101-9032-650001	Overload switch	71	TH101-9038-650001	Support tube
34	TH101-9029-650001	Power cord	72	TH101-9057-650002	Connecting pole
35	TH101-9023-630001	Cord sheath	73	TH101-9030-650003-73	Washer
36	TH101-9053-650001	Cord clamp plate	74	TH101-9023-650001	Wheel axel sleeve
37	TH101-9053-650004	Switch frame plate	75	TH101-9031-650001	Wheel
38	TH101-9SBABC05-20	Screw	76	TH101-BAG	Collection bag