



EH0154 2 kW Fan Heater



- 2 Heat settings**
- 2 Positions: Letterbox or upright**
- Adjustable thermostat**
- Built-in carrying handle**
- Safety overload cut-out**
- Safety tilt-switch**

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

OPERATION

Place the EH0154 on a firm flat surface. It can be used either upright or in the "letterbox" orientation as shown on the front cover.

Plug the mains lead into a 13 Amp mains socket.

If connecting via an extension lead, make sure that the lead is rated at 13 Amps or more, and that it is fully unwound.

Switch the appliance on at the mains socket.

Use the rotary power control switches on the top to select the required operation:

- O = OFF
- Fan symbol = cool air only
- 1 = Low Heat (1kW)
- 2 = High heat (2 kW)

Unplug the appliance from the mains when not in use.

USING THE THERMOSTAT

The thermostat can be use to regulate the room temperature.

Turn the rotary switch to the high heat position, and rotate the temperature control fully clockwise.

The appliance will then operate at maximum output. When the desired temperature is reached, rotate the temperature control anticlockwise until a click is heard. The appliance will then switch on and off to keep the room at the desired temperature.

Either the low or high heat setting can be used.

PRODUCT SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Place the appliance on a firm flat surface.
- Ensure that there is at least 300mm (1') between the sides of the appliance and any flammable materials
- Ensure that there is at least 900mm (3') from the top of the appliance and any flammable materials.
- Do not place on soft surfaces.



- Do not cover. This symbol shown on the casing of the appliance means that the appliance should not be covered.
- Do not use outdoors.
- Do not use in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use in bathrooms, or in wet locations.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use the appliance without the feet attached.
- Do not locate the appliance immediately below a socket outlet

PAT TESTING

When used in an office environment, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.


It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings).

MAINTENANCE

Before cleaning, turn the appliance off, and disconnect from the mains supply. The appliance may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do not use stronger detergents or solvents as these may damage the plastic.

Using a dry 1" (25 mm) paint-brush, remove any dust from the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

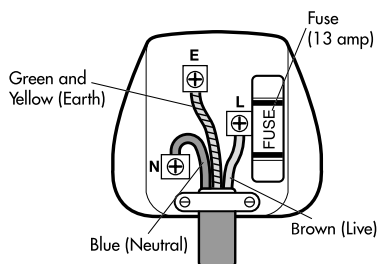

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".
- Make sure that the cord-grip is positioned correctly (over the

outer sheath of the cable) and it fully tightened.

OPERATING COSTS

At time of going to press, the average cost of electricity is £0.11 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.

At this cost, the appliance will cost £0.11 per hour to run on the "low heat" setting, or £0.22 per hour to run on the "high heat" setting, with the thermostat set to its maximum.

If the thermostat is used to regulate the temperature the operating costs will be lower, depending on the room temperature.

FAULT-FINDING

If the appliance is not operating, proceed as follows:

Check that the mains plug is firmly in the socket, and that the socket is switched ON.

Check that at least one of the power control switches is switched ON.

The appliance also has a overload protection device to prevent overheating. If this operates, disconnect the appliance from the mains supply, and remove any objects on or adjacent to the appliance that could have caused the overheating. Wait 10 minutes, and reconnect to the mains supply.

If the appliance still does not function, or the overload protection device operates again, consult an authorised service agent.

The appliance is also fitted with a tip-over switch which will disconnect the power if it falls over. If it does not operate, make sure that it is standing upright.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Dimensions:	250×230×130 mm
Weight:	1 kg
Power supply:	230 V ~
Power consumption:	2000 W
Operating current:	8.7 A

SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of two years.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX

website: www.prem-i-air.com