



**EH0286**  
**800W 7-Fin Oil-Filled Radiator**



**Adjustable thermostat**  
**Built-in carrying handle**  
**Safety overload cut-out**  
**2 year guarantee**

# **IMPORTANT**

## **Installer and Users please note:**

These instructions should be read carefully and left with the user of the product for future reference.

## **BEFORE USE**

Inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

## **INSTALLATION**

Attaching the feet.

Clip the front foot (the one with rounded corners) on to the metal plate at the front. (The front is the end that has the controls)

Clip the rear foot (the one with square corners) on to the base of the rearmost fin.

Check that the radiator stands in an upright position and is stable.

Leave for one hour before switching on, to allow all the oil to drain to the bottom.

## PRODUCT SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Place the EH0286 on a firm flat stable surface, ensuring that it stands upright.
- Do not place on soft surfaces
- Do not use the heater without the feet attached.
- Ensure that there is at least 300mm (1') between the sides of the heater and any flammable materials
- Ensure that there is at least 900mm (3') from the top of the heater and any flammable materials.



- Do not cover. This symbol shown on the casing of the heater means that the heater should not be covered.
- For indoor use only
- Not suitable for use in boats, caravans or similar locations.
- Do not locate the heater immediately below a mains socket outlet.
- Do not use in bathrooms, or in wet locations.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the heater in locations where paint, petrol or other flammable liquids are used or stored.

## **OPERATION**

Plug the mains lead into a 13 Amp mains socket.

If connecting via an extension lead, make sure that the lead is rated at 6 Amps or more, and that it is fully unwound.

Switch the unit on at the mains socket.

Turn the Power Switch to the ON position. The power switch will illuminate.

Unplug the heater from the mains when not in use.

## **USING THE THERMOSTAT**

The thermostat can be use to regulate the room temperature.

Turn both switches on (high heat), and rotate the temperature control fully clockwise.

The heater will then operate at maximum output. When the desired temperature is reached, rotate the temperature control anticlockwise until a click is heard. The heater will then switch on and off to keep the room at the desired temperature. The indicator light will show that this is happening.


If the temperature control is rotated fully anticlockwise, it will operate as a "frost-stat" and switch the heater on if the temperature drops below 4°C, preventing damage by frost.

## MAINTENANCE

Before cleaning, turn the heater off, and disconnect from the mains supply. The heater may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do not use stronger detergents or solvents as these may damage the plastic.

This heater is filled with a precise quantity of special oil. Repairs requiring the opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

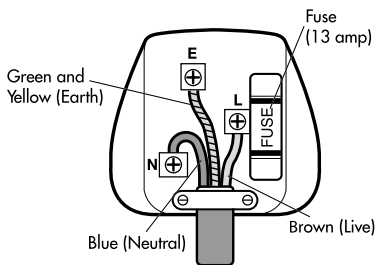

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".
- Make sure that the cord-grip is positioned correctly (over the

outer sheath of the cable) and it fully tightened.

## PAT TESTING.

When used in an office environment, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.

## **OPERATING COSTS**

At time of going to press, the average cost of electricity is £0.11 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.

At this cost, the EH0286 will cost £0.09 per hour to run with the thermostat set to its maximum.

If the thermostat is used to regulate the temperature the operating costs will be lower, depending on the room temperature.

## **DISPOSAL AND RECYCLING**

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

When scrapping the heater, follow the regulations for the disposal of oil

## **FAULT-FINDING**

If the EH0286 is not operating, proceed as follows:

Check that the mains plug is firmly in the socket, and that the socket is switched ON.

Check that at least one of the power control switches is switched ON.

The EH0286 also has a overload protection device to prevent overheating. If this operates, disconnect the heater from the mains supply, and remove any objects on or adjacent to the heater that could have caused the overheating. Wait 10 minutes, and reconnect to the mains supply.

If the heater still does not function, or the overload protection device operates again, consult an authorised service agent.

## **TECHNICAL SPECIFICATION**

Dimensions:	410×370×130mm
Weight:	4.4kg
Power supply:	230V AC
Power consumption:	800W
Operating current:	3.5A

## SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of twelve months.

This *Elite* product is guaranteed for a further twelve months subject to the enclosed registration card being completed and returned to the address printed on it, or the registration form being completed on-line at **www.prem-i-air.com**

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,  
Lancots Lane,  
Sutton Oak,  
St. Helens,  
Merseyside.  
WA9 3EX

**website:** [www.prem-i-air.com](http://www.prem-i-air.com)