



# **EH1224**

## **2kW Patio Heater**



- 2 Heat settings**
- Pull-cord switch**
- Height-adjustable stand**
- Suitable for outdoor use**
- Adjustable angle**

# **IMPORTANT**

## **Installer and Users please note:**

These instructions should be read carefully and left with the user of the product for future reference.

## **ASSEMBLY**

Identify the three sections of the pole.

The upper section has a black plastic locking nut at the top.

The lower section has a closed end, with screw threads in it.

Insert the lower section in to the base. Insert the M8×40mm screw through the large washer, then through the base into the threads at the end of the tube and fully tighten, Stand the base on the floor.

Insert the middle section of the pole into the lower section. Rotate the pole until both holes align with the holes in the lower section. Insert the one M4×12mm screw through the cable clip into one of the holes and fully tighten. Insert the other screw into the other hole and fully tighten.

Insert the top section of the pole into the middle section. Rotate the pole until both holes align with the holes in the middle section. Insert the one M4×12mm screw through the cable clip into one of the holes and fully tighten. Insert the other screw into the other hole and fully tighten.

Loosen the screw at the back of the heater body, and slide the heater body over the top of the pole. Fully re-tighten the screw.

Loosen the pivot screw in the heater body, and adjust the reflector to the preferred angle. Re-tighten the screw.

## PRODUCT SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Ensure that curtains are at least 900mm (3') from the top of the heater.
- Do not place on soft surfaces.



- Do not cover when in use. This symbol shown on the casing of the heater means that the heater should not be covered when in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the heater in locations where paint, petrol or other flammable liquids are used or stored.
- Do not insert any object into the heater through the grilles. This may damage the heater or result in overheating or electric shock.
- If used outdoors, the heater must be connected via a Residual Current Device (RCD) rated at 30mA or less.
- The heater must be installed where it cannot be touched whilst in a bath or shower.
- This heater must not be connected to a timer or other type or programmable switch (a fire hazard exists if the heater is covered when the timer switches it on)

## OPERATION

- Plug the mains lead into a 13 Amp mains socket that is protected by a 30mA Residual Current Device (RCD). Never use equipment outdoors that is connected to a socket that is not protected by an RCD.
- If connecting via an extension lead, make sure that the lead is rated at 10 Amps or more, and that it is fully unwound.
- Switch the unit on at the mains socket.
- Pull the cord-operated switch to select the required operation:

Figure "1" displayed = Low Heat (1000W)

Figure "2" displayed = High Heat (2000W)

- Do not touch the grille when the heater is in operation, because it will be hot and may cause burns.
- Unplug the heater from the mains when not in use.
- To adjust the angle, switch off the heater and allow it to cool for 15 minutes. Slacken the pivot screw, and adjust the reflector to the preferred angle. Re-tighten the screw. The heater may now be switched on.
- To adjust the height, loosen the black locking nut at the top of the pole, and slide the telescopic section of the pole to the preferred height. Re-tighten the black locking nut.

## OPERATING COSTS

At time of going to press, the average cost of electricity is £0.11 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.


At this cost, the EH1224 will cost £0.11 per hour to run on the "low heat " setting, and £0.22 per hour to run on the "high heat".

# MAINTENANCE

Before cleaning, turn the heater off, and disconnect from the mains supply. The heater may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do not use stronger detergents or solvents as these may damage the paint finish.

Using a dry 1" (25mm) paint-brush, remove any dust from the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

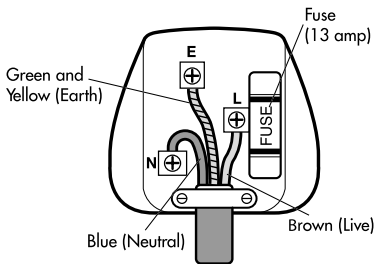

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

## **STORAGE**

When not in use, or during inclement weather, the black fabric dirt and dust protector should be deployed. Always make sure that the heater is unplugged and cannot be accidentally switched on when the dirt and dust protector is being used.

## **DISPOSAL AND RECYCLING**

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

## **TECHNICAL SPECIFICATION**

Dimensions (wall mounting):	535x355x245mm
Weight:	2kg
Power supply:	230V AC
Power consumption:	2000W
Operating current:	8.7A

## SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,  
Lancots Lane,  
Sutton Oak,  
St. Helens,  
Merseyside.  
WA9 3EX

**website:** [www.prem-i-air.com](http://www.prem-i-air.com)