



INSTRUCTIONS FOR:

SUBMERSIBLE POND PUMPS

MODEL No's: **WPP2300, WPP2650, WPP3500**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

1.1. ELECTRICAL SAFETY

WARNING! It is the owner's responsibility to read, understand and comply with the following:

You must check all electrical equipment and appliances to ensure they are safe before using. You must inspect power supply leads, plugs and all electrical connections for wear and damage. You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products. It is particularly important to use an RCD together with portable products that are plugged into an electrical supply not protected by an RCCB. If in doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer. **You must** also read and understand the following instructions concerning electrical safety.

- 1.1.1. The Electricity At Work Act 1989 requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2. The **Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. **If in any doubt about electrical safety, contact a qualified electrician.**
- 1.1.3. Ensure the insulation on all cables and the product itself is safe before connecting to the mains power supply. The pump and cable are designed for submerging in water and as such must not be tampered with (if in doubt, contact a qualified electrician).
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply leads, plugs and all electrical connections for wear and damage, especially power connections, to ensure that none is loose.

- 1.1.6. **Important:** Ensure the voltage marked on the product is the same as the electrical power supply to be used, and check that plugs are fitted with the correct capacity fuse. A 13 amp plug may require a fuse smaller than 13 amps for certain products, see fuse rating at right.

- 1.1.7. **DO NOT** pull or carry the appliance by its power supply lead.
- 1.1.8. **DO NOT** pull power plugs from sockets by the power cable.
- 1.1.9. **DO NOT** use worn or damaged leads, plugs or connections. Immediately replace or have repaired by a qualified electrician. A U.K. 3 pin plug with ASTA/BS approval is fitted. In case of damage, cut off and fit a new plug according to the following instructions (discard old plug safely).

(UK only - see diagram at right). **Ensure the unit is correctly earthed via a three pin plug.**

- a) **Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.**
- b) **Connect the BROWN live wire to live terminal 'L'.**
- c) **Connect the BLUE neutral wire to the neutral terminal 'N'.**
- d) **After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.**

- 1.1.10. The electrical cable is designed for use in water and must not be substituted. If damaged contact a qualified electrician.

 
- 1.1.11. **Extension cable use: Only use a cable designed for use with water equipment. Contact your dealer or a qualified electrician for advice. Ensure water is kept clear of electrical mains power supply. DO NOT touch switch or plug with wet hands.**

1.2. GENERAL SAFETY

WARNING! This pump must be used in accordance with Health & Safety, government, local authority and water authority rules and regulations including appropriate procedures for the protection of persons, animals, equipment and property.

- ✓ Familiarise yourself with application, limitations and potential hazards peculiar to the pump.
- WARNING!** Disconnect the pump from the mains power before changing accessories, servicing or performing any maintenance.
- WARNING! DO NOT** have contact with the water whilst the submerged pump is connected to the mains supply.
- ✓ Maintain the pump in good condition (use an authorised service agent). Keep the pump clean.
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Switch off the power on all devices that are in contact with the water before carrying out any cleaning or maintenance work on the device.
- ✗ **DO NOT** operate the pump if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** use the pump for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the pump out of water. The pump pick-up area must be completely submerged during operation.
- ✗ **DO NOT** operate the pump during freezing temperatures. **DO NOT** leave the pump in water that may freeze.
- ✗ **DO NOT** carry the pump by its electrical cable, or outlet pipe.
- ✗ **DO NOT** use the device in water additionally chlorinated, in acidic or alkaline solutions.
- ✗ **DO NOT** use in salt water.
- ✗ **DO NOT** let the pump run dry. This can cause irreparable damage.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

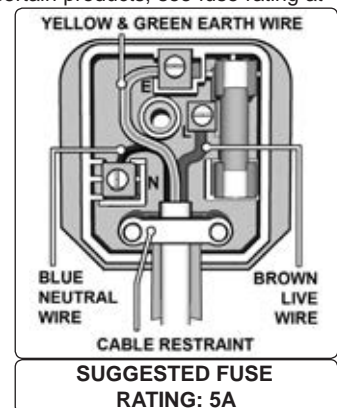

2. INTRODUCTION & SPECIFICATIONS

A range of pond pumps suitable for creating garden water features such as fountains and waterfalls. They also provide the important functions of filtration and water circulation which are necessary to maintain healthy plant and fish life. Each pump is supplied with 5 fountain heads (Fig.3) and 10m of cable.

Technical Data.

	WPP2300	WPP2650	WPP3500
Model:	WPP2300	WPP2650	WPP3500
Power Consumption:	55W	75W	95W
Max. Head:	2.3mtr	2.7mtr	3.0mtr
Max. Flow Rate:	2300ltr/h	2650ltr/h	3500ltr/h
Max. Submersion Depth:	2.3mtr	2.7mtr	3.0mtr
Power Cable:	10mtr	10mtr	10mtr
Max. Temp. of the Pumped Fluid:	35°C	35°C	35°C
Input:	230V	230V	230V
Protection Type:	IP68	IP68	IP68

3. OPERATION

☐ **WARNING! Ensure that you read, understand and apply the safety instructions in Section 1.**

3.1. Start-up.

- 3.1.1. Place the pump on a flat level surface which is raised from the bottom of the pond. This prevents the pump from clogging too quickly.
- 3.1.2. You may use the pump lying on its side. You should however, make sure that the motor axis is horizontal, otherwise the shaft will be subject to increased wear.

3.2. Cascade Fountain Mode.

- 3.2.1. When installing the pump in the pond, make sure that the fountain head projects above the water surface. Please refer to Fig.1 and ensure the regulating valve Fig.1.1 is set at 0° (turned all the way to the right). The delivery heights and diameters in Fig.1 correspond to a condition in which the fountain head is placed 50mm above the water surface.

Fig.1

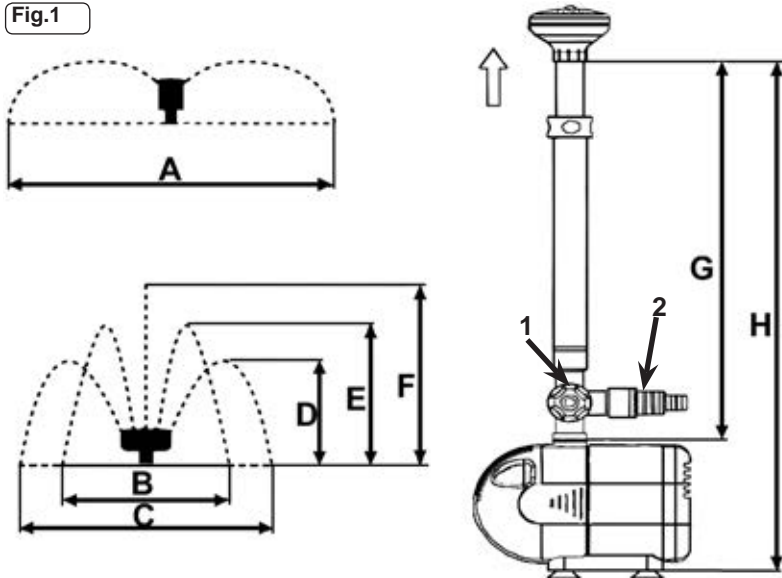 


Fig.2



Refer to Fig 1.....	WPP2300	WPP2650.....	WPP3500
Diameter of 1st stage "C"	1100mm	1200mm	1320mm
Diameter of 2nd stage "B"	800mm	1000mm	1100mm
Delivery head of 1st stage "D"	700mm	900mm	990mm
Delivery of second stage "E"	1100mm	1450mm	1595mm
Max. delivery head "F"	1300mm	1800mm	1980mm
Distance from pump outlet to fountain head "G"	240-395mm	255-410mm	255-410mm
Distance from pump base to fountain head "H"	365-520mm	380-535mm	380-535mm

3.3. Fountain Heads.

- 3.3.1. A selection of fountain heads are supplied with the pump (fig.3). Choose the desired style and install onto the outlet pipe.

3.4. Fountain and Water Spout Connection.

 
- 3.4.1. Additional water spectacles can be connected to the water spout connection (Fig.1.2) with a hose of 19mm OD.
- 3.4.2. To open the spout connection, turn the regulating valve (Fig.1.1) anticlockwise between 0-90° to adjust the flow between the spout and the fountain head.

3.5. Water Spout Only.


- 3.5.1. Turn the regulating valve all the way anticlockwise to 90°. All the water flow will now be through the water spout.

4. MAINTENANCE

- ❑ **WARNING!** With the exceptions listed below, all pump and electrical cable service maintenance and repair must be undertaken by an authorised service agent only. Failure to observe this rule may be dangerous and will invalidate your warranty.
 - ❑ **WARNING!** Ensure that the pump is disconnected from the mains power supply before attempting any service or maintenance.
 - NOTE:** The pump filter should only be cleaned out when necessary, as cleaning will simultaneously wash out the micro organisms which help to keep the pond healthy. However, it should be cleaned whenever there is a noticeable deterioration in pump performance.
- 4.1. Cleaning the filter sponge.**
- 4.1.1. Press the filter housing together on both sides (fig.4.1) and pull off the cover.
- 4.1.2. Remove the sponge filter (fig.4.2) from the housing and clean with clean cold water.
- CAUTION:** Never use the pump without the filter in place as this could lead to damage to the pump.
- 4.2. Cleaning the functioning parts.**
- 4.2.1. Open the pump chamber lid (fig.4.3) by twisting it anti-clockwise a quarter turn and pulling it clear of the pump body.
- 4.2.2. Remove the magnetic impeller (fig.4.4) carefully from the shaft. As this is done the magnetic force of the impeller must be overcome.
- 4.2.3. **DO NOT** use any implements to remove dirt from inside the pump, but simply wash it out with lukewarm water.
- 4.2.4. Use a soft sponge to remove any dirt deposits.
- 4.2.5. To reassemble the pump, carefully slide the magnetic impeller onto the shaft. At a certain point, the impeller will be drawn into the housing by the magnetic force.
- 4.2.6. Check that the ceramic washer (fig.4.5) and rubber bearing (fig.4.6) at both ends of the shaft are correctly mounted.
- 4.2.7. Before closing the pump chamber with the lid (fig.4.3) make sure that the o-ring (fig.4.7) is correctly seated.
- 4.2.8. Plug the supply cable into the mains supply briefly (no more than 3 seconds) to check that the impeller turns freely. A certain level of noise is inevitable during this dry run. This is no cause for concern. When used in water, the pump should operate silently.
- 4.3. Winter storage**
- 4.3.1. Place the pump in water filled vessel in a frost free room. Storage in water prevents deposits from accumulating on the pump. If the pump is stored dry, these deposits can block the impeller. If you wish to store the pump dry, you must ensure that the functioning parts and filters have been thoroughly cleaned and dried.

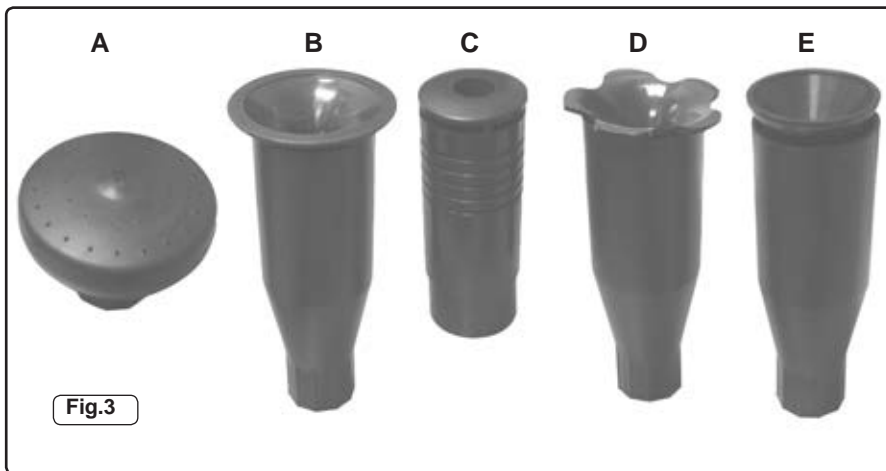

 A - Cascade
B - Water Bell
C - Foaming Jet
D - Water Lily
E - Petunia

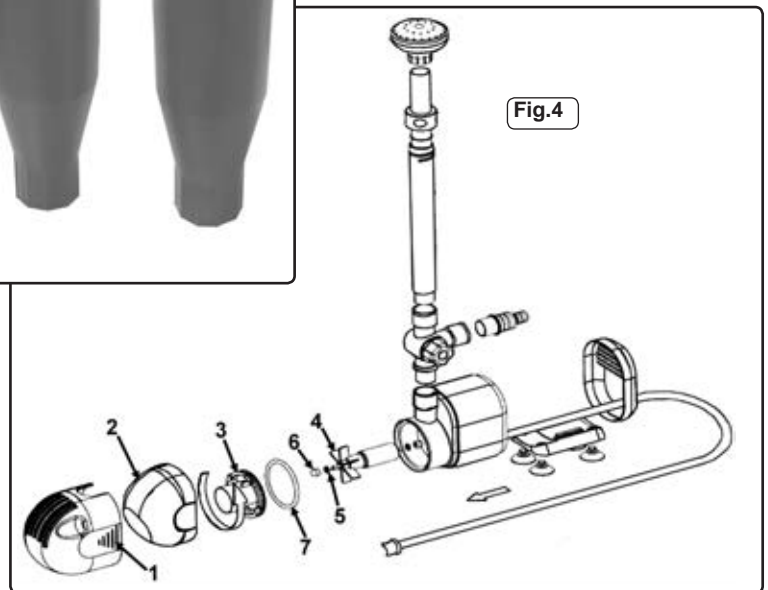

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.



WEEE Regulations

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



SEALEY

Sole UK Distributor, Sealey Group,
 Kempson Way, Suffolk Business Park,
 Bury St. Edmunds, Suffolk,
 IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk