

# DRAPER<sup>®</sup>

## INSTRUCTIONS FOR 610W 230V 82mm Planer

Stock No.20513

Part No.PT610V

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



CE

DRAPER<sup>®</sup>

### GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product. Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

# 1. TITLE PAGE

---

## **1.1 INTRODUCTION:**

USER MANUAL FOR:

**610W 230V 82mm PLANER**

Stock no. 20513

Part no. PT610V

## **1.2 REVISIONS:**

---

Date first published June 2012

---

---

---

---

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/b2c/b2cmanuals.pgm>

DRAPER TOOLS LIMITED

HURSLEY ROAD

CHANDLER'S FORD

EASTLEIGH

HAMPSHIRE

SO53 1YF

UK

WEBSITE: [www.draper.co.uk](http://www.draper.co.uk)

PRODUCT HELPLINE: +44 (0) 23 8049 4344

GENERAL FAX: +44 (0) 23 8026 0784

## **1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:**

**WARNING!** Information that draws attention to the risk of injury or death.

**CAUTION!** Information that draws attention to the risk of damage to the product or surroundings.

## **1.4 COPYRIGHT © NOTICE:**

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

---

# 2. CONTENTS

---

## 2.1 CONTENTS

<i>Page content</i>		<i>Page</i>
1	TITLE PAGE	
	1.1 INTRODUCTION .....	2
	1.2 REVISION HISTORY .....	2
	1.3 UNDERSTANDING THIS MANUAL .....	2
	1.4 COPYRIGHT NOTICE .....	2
2	CONTENTS	
	2.1 CONTENTS .....	3
3	GUARANTEE	
	3.1 GUARANTEE .....	4
4	INTRODUCTION	
	4.1 SCOPE .....	5
	4.2 SPECIFICATION .....	5
	4.3 HANDLING & STORAGE .....	5
5	HEALTH & SAFETY INFORMATION	
	5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE .....	6-7A
	5.2 ADDITIONAL SAFETY FOR PLANERS .....	7A
	5.3 CONNECTION TO THE POWER SUPPLY .....	7A
6	TECHNICAL DESCRIPTION	
	6.1 IDENTIFICATION .....	8B
7	UNPACKING & CHECKING	
	7.1 PACKAGING .....	8A
	7.2 WHAT'S IN THE BOX? .....	8A
8	SETTING THE PLANER	
	8.1 STARTING THE MACHINE .....	9
	8.2 CHAMFERING EDGES .....	9
	8.3 DUST EXTRACTION .....	9
	8.4 DIRECTION OF ADVANCEMENT .....	10
	8.5 BLADE REPLACEMENT/ADJUSTMENT .....	10-11
	8.6 DRIVE BELT REPLACEMENT .....	11
	8.7 SETTING THE PLANING DEPTH .....	12
	8.8 GENERAL PLANING OPERATIONS .....	12
	8.9 REBATING .....	12
9	OPTIONAL ACCESSORIES	
	9.1 OPTIONAL ACCESSORIES .....	13
10	TROUBLESHOOTING	
	10.1 TROUBLESHOOTING .....	14
11	MAINTENANCE	
	11.1 MAINTENANCE & PART REPLACEMENT .....	15
12	EXPLANATION OF SYMBOLS	
	12.1 EXPLANATION OF SYMBOLS .....	16
13	DISPOSAL	
	13.1 DISPOSAL .....	17
	DECLARATION OF CONFORMITY .....	ENCLOSED

## 3. GUARANTEE

---

### 3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England. Telephone: (023) 8026 6355.

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee period covering parts/labour is 12 months from the date of purchase. The guarantee is extended to 24 months for parts only. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the Terms of Warranty, repair and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

Note: This tool is intended for domestic use only.

# 4. INTRODUCTION

---

## 4.1 SCOPE

This hand held power tool is ideal for DIY and light commercial use.  
Suitable for most planing applications including cabinet making and door hanging.

## 4.2 SPECIFICATION

Stock no .....	20513
Part no .....	PT610V
Motor:	
Rated voltage .....	230V~
Rated frequency .....	50Hz
Rated input .....	610W
Revolutions per minute (no load) .....	17,000min <sup>-1</sup>
Cutting capacity:	
Depth.....	0-2mm
Width.....	82mm
Sole plate length .....	230mm
Sound pressure level .....	90.1±3dB(A)
Sound power level .....	101.1±3dB(A)
Vibration level .....	4.2m/s <sup>2</sup>
Weight .....	2.46kg

## 4.3 HANDLING & STORAGE

Take care when handling and lifting. Do not drop this machine.  
Store in a dry location out of the reach of children.

# 5. HEALTH & SAFETY INFORMATION

---

## 5.1 GENERAL POWER TOOL SAFETY WARNINGS

**WARNING:** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.**

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

- 1) **Work area safety**
    - a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
    - b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
    - c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.
  - 2) **Electrical safety**
    - a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
    - b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
    - c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
    - d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
    - e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
    - f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.
  - 3) **Personal safety**
    - a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
    - b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
    - c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
    - d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
  - e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
  - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
  - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.
- 4) **Power tool use and care**
    - a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
    - b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
    - c) **Disconnect the plug from the power source and/or battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
    - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
    - e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
    - f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
    - g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
  - 5) **Service**
    - a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

## 5. HEALTH & SAFETY INFORMATION

---

### **5.2 ADDITIONAL SAFETY FOR PLANERS**

**Wait for the cutter to stop before setting the tool down.** An exposed rotating cutter may engage the surface leading to possible loss of control.

**Hold the power tool by the handles (insulated gripping surfaces) only, in case the cutter contacts its own cord.**

Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

**Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by your hand or against the body leaves it unstable and may lead to loss of control.

### **5.3 CONNECTION TO THE POWER SUPPLY**

Make sure the power supply information on the machine's rating plate are compatible with the power supply you intend to connect it to.

This drill comes supplied with a UK standard 3 pin plug fitted. It is designed for connection to a domestic power supply rated at 230V AC.

It is a Class 2 machine (double insulated); is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instruction supplied with the extension lead.

This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

Apart from replacing the fuse in the plug, no other electrical work is recommended on this planer.

---

*Blank page*



# 6. TECHNICAL DESCRIPTION

## 6.1 IDENTIFICATION



- ① Trigger switch
- ② Trigger release button
- ③ Hand grip
- ④ Power cable
- ⑤ Rear sole plate
- ⑥ Drive belt cover

- ⑦ Rebating depth guide
- ⑧ Front sole plate
- ⑨ Depth regulation knob
- ⑩ Dust extraction nozzle
- ⑪ Blade drum
- ⑫ Chamfer guide 'V' groove

# 7. UNPACKING & CHECKING

---

## 7.1 PACKAGING

Carefully remove the planer from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the lathe.


The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

Warning! Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

## 7.2 WHAT'S IN THE BOX?

As well as the planer; there are several parts not fitted or attached to it.

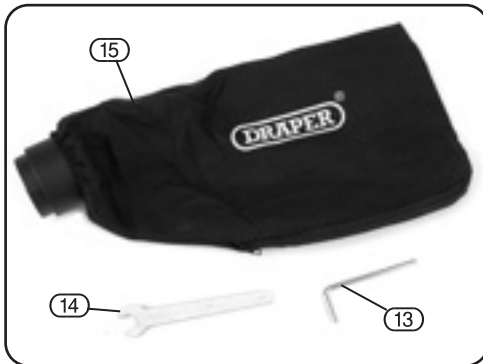

(13) 2mm hex. key

(14) 8mm spanner

(15) Dust bag

## 8. SETTING THE PLANER

**Warning:** Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

### 8.1 STARTING THE MACHINE - FIG. 1

Before initial startup and at regular intervals, check the blade assembly is secure and adjusted correctly. The machine is supplied ready for use requiring only the planing depth to be determined using the depth regulation knob (9).

The on/off switch (1) is fitted with a safety button (2) so that it is not possible to start the planer by accident. To start the planer, press the safety button (2) then depress the on/off switch (1).

**Important:** Before using the machine on any work or scrap pieces of timber, let the blade run for a few minutes to observe for vibration etc.

Wait for the cutter to stop before settling the tool down. An exposed cutter may engage the surface leading to possible loss of control and serious injury.


### 8.2 CHAMFERING EDGES - FIG. 2

The V-groove (12) in the base of the planer is used for chamfering. Place the planer with the V-groove on the edge of the workpiece, push the planer slowly and evenly forward along the edge.

### 8.3 DUST EXTRACTION

Inhalation of dust particles can be detrimental to health. The dust outlet must be connected with a dust extraction machine.

Note: Due to the outlet diameter, a size adaptation may be necessary. All wood dust (including dust from composites like chipboards and fibreboards, etc.) is hazardous to health; it can affect the nose, the respiratory system and the skin. For example MDF (medium density fibreboard) which contains formaldehyde is a known carcinogen. In addition to the above measures a correctly fitted dust mask, suitable for the activity and in accordance to the relevant standard, must be worn. For work activities involving exposure to the fine wood dust, a mask rated to at least FFP2 should be used.

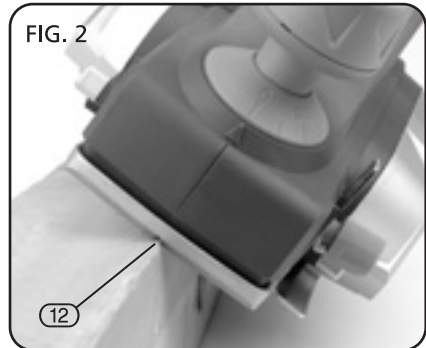

## 8. SETTING THE PLANER

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

### 8.4 DIRECTION OF ADVANCEMENT - FIG. 3

The planer advancement direction should always be as shown.

The roller rotation direction is indicated by an arrow on the belt cover.

#### BLADES:

The machine is equipped with double edged H.S.S. blades. For optimal long term performance, periodically check the condition of the blades and, if necessary replace them.

Only use perfectly sharpened blades!

Only use recommended blades and blade holders.

#### IMPROPER USE:

The functions and use of this are those exclusively indicated in this manual.

Wait for complete run-down before putting the tool aside.

Replacement blades are available from your local Draper stockist.

IMPORTANT: The replacement blades must always be reversed or replaced as a pair.



### 8.5 BLADE REPLACEMENT/ADJUSTMENT - FIGS. 4 - 8

Only use sharp blades.

**Warning:** Switch off the power supply and disconnect the mains lead before carrying out any maintenance operations.

The blades are extremely sharp, so care must be taken at all times.

Tighten the bolts (11.1) in the direction shown (Fig.5) which will release the tension on the blade. When the blade is loose slide it out along groove (11.2).

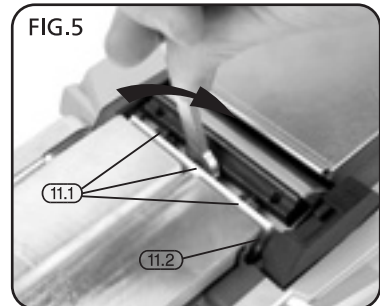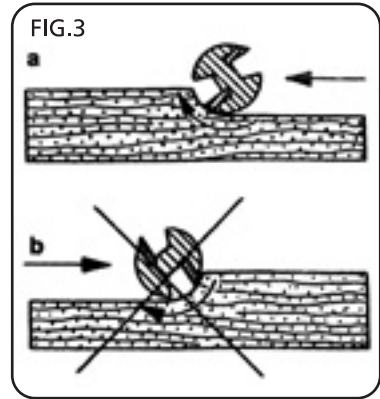

## 8. SETTING THE PLANER

Loosen the two grub screws (11.3) (Fig.6) anticlockwise until they are flush with the surface of the clamp block (11.4). Insert the new blade making sure of the correct orientation (Fig.8) ie. the groove down the back of the blade is NOT against the clamp block.

Adjust the bolts to grip the blade loosely so that it stays in place, but still allowing ease of movement for setting up the blade height/level.



Adjust the front sole plate so that it is lower than the rear plate to avoid interference.

Place a straight edge across the rear sole plate (5) and cutter block.

By screwing the grub screws clockwise equally, raise the blade up gradually. Keep checking the blade height by moving the cutter block round by hand to see if the blade scrapes on the straight edge. Set the blade so that it just touches the straight edge (Fig.8). Make this check at three points across the blade to ensure a correct and equal level is achieved. When adjustment is complete, ensure the blade is central in the cutter block before tightening the three bolts gripping the blade securely.

**Warning:** After having completed this operation, ensure that the blade and blade support are securely fastened in the cutter block, if not, serious accidents may occur.

**Warning:** Due to the forces and vibration which are experienced by the cutter block, it is recommended that a suitable thread locking compound be applied to the blade adjustment grub screws. For this reason it is also important before each use to inspect the blade set up.

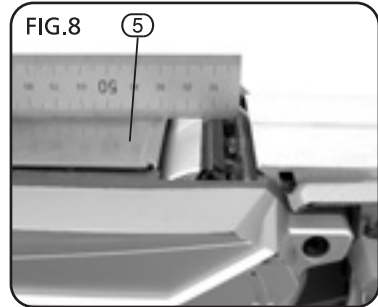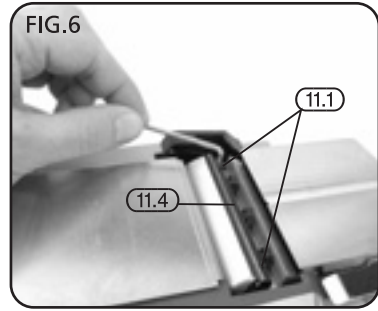

### 8.6 DRIVE BELT REPLACEMENT- FIG. 9

Switch off the power supply and disconnect the mains lead before carrying out any maintenance operations. To replace the drive belt, remove cover (6) to access the belt and pulleys. Simply replace the belt and refit the cover.



## 8. SETTING THE PLANER

---

### 8.7 SETTING THE PLANING DEPTH - FIG. 10

The front sole plate is height adjustable with set graduations of 0.4mm by means of knob (9). The cutting height can be set between 0-2.0mm.




### 8.8 GENERAL PLANING OPERATIONS

Place the front planing base on the work piece. With the depth set, start the planer and allow the blades to run up to full speed. Move the machine across the work piece, ensuring the pass is smooth, even and gentle to obtain the optimum cut.

Note: Moving the planer to fast or backwards will cause the machine to bounce and produce a poor finish.

### 8.9 REBATING - FIGS. 11 - 12

Set the rebate depth guide (7) and secure with locking knob (7.1). Begin cutting.

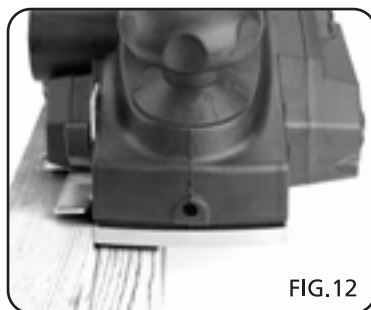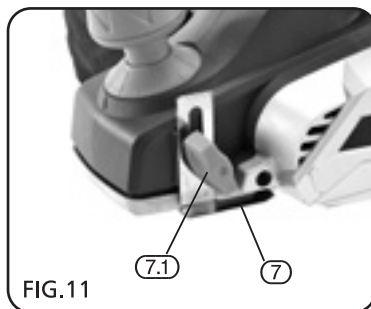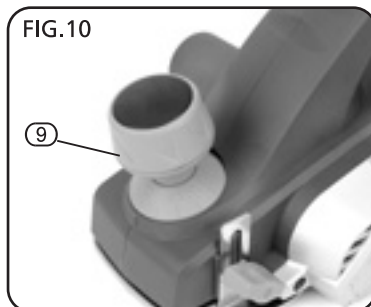

## 9. OPTIONAL ACCESSORIES

---

### 9.1 OPTIONAL ACCESSORIES

Stock No.	Part No.	Description
66775.	YPT682.	Blades (x2).
24219.	YPT610A.	Drive Belt.
03950.	YPL683A.	Dust Bag.

See your Draper Stockist.

# 10. TROUBLESHOOTING

---

## 10.1 TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Motor does not start.	1. Fuse. 2. Brushes worn. 3. Unsure.	1. Replace time delay fuse or reset circuit breaker. 2. Have carbon brushes replaced by an authorised service centre. 3. Contact an authorised service centre.
Machine will not cut or leaves a rough finish.	1. Blunt blades. 2. Wood is wet.	1. Replace blades <sup>†</sup> . 2. Leave wood out to dry.
Loss of drive.	1. Worn or broken drive belt.	1. Replace belt <sup>††</sup> .
Machine does not cut to the correct depth.	1. Blade adjustment wrong.	1. Adjust blades.

† Replacement blades can be obtained from your local Draper stockist.

†† Replacement drive belts can be obtained from your local Draper stockist.



# 11. MAINTENANCE

---

## ***11.1 MAINTENANCE & PARTS REPLACEMENT***

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tool in good working condition.

The motor must be correctly ventilated during tool operation. For this reason avoid blocking the air inlets. After use disconnect the tool from the power supply and vacuum the ventilation slots.

If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

# 12. EXPLANATION OF SYMBOLS

---

## 12.1 EXPLANATION OF SYMBOLS



Warning!  
Wear dust mask.



Warning!  
Read the instruction manual



Warning!  
Wear goggles.



Warning!  
Wear ear defenders.



WEEE  
Do not dispose of Waste Electrical  
& Electronic Equipment in with  
domestic rubbish



Class II construction  
(Double insulated).

# 13. DISPOSAL

---

## 13.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE\* as unsorted municipal waste.



\* Waste Electrical & Electronic Equipment.





- **DRAPER TOOLS LIMITED,**  
Hursley Road, Chandler's Ford,  
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Internet:** [www.draper.co.uk](http://www.draper.co.uk)
- **E-mail:** [sales@drapertools.com](mailto:sales@drapertools.com)
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**  
For aftersales servicing or warranty repairs, please  
contact the Draper Tools Helpline for details of an  
agent in your local area.

YOUR DRAPER STOCKIST