# GARDENA Planning brochure 2013

GARDENA Sprinklersystem



# Work in simple steps What you need to do What you need Easier than you think Not much! Collect together a few coloured pens, pencil Using this planning document First of all, draw a ground plan you can plan your own irrigation of your garden. Following our system yourself step by step. instructions, you will be able to add all the system components and a pair of compasses. Using a garden as an example, And off you go. we will show you how to go you need to your plan. At the end, you can then enter the products you have chosen in the shopping list on page 12.

# 1. Which area is to be watered?

Draw a plan of your land — ideally on graph paper with mm squares — on a scale of 1:100 (1 cm = 1 m) or 1:200 (1 cm = 2 m)

Mark areas to be watered and not to be watered.

Enter the location of the water connection on the drawing (water tap, well, underground tank)



Scale 1:200 (1 cm = 2 m)

# 2. Which/how many sprinklers are needed?

Select the right sprinklers from page 5. We recommend the following proceeding: Use pop-up oscillating sprinklers for square and rectangular areas. Use large-area pop-up irrigation AquaContour automatic to water individually shaped areas. Cover other areas with Circular Sprinklers. Use a pair of compasses to draw the Circular Sprinklers on your plan.


- Draw 90° or 270° sprinklers in the corner areas.
- Plan 180° or other partial sectors for the edges of your garden.
- Cover the remaining areas in the centre with 360° sprinklers.

Enter the number of sprinklers needed in the summary on page 5 first and then in your shopping list on page 12.

#### Tip:

In windy areas, reduce the space between sprinklers to allow for drifting.

Select the correct sprinkler on the right and draw it on your plan.
Add the sprinkler description and the sprinkler thread!

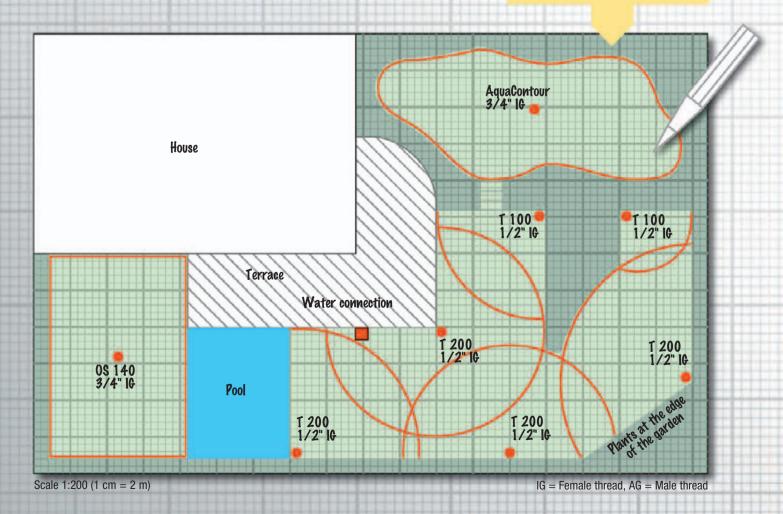

**AquaContour Planning** Sector Art. No. individually shaped automatic 25-360° **Enter the number** Connecting: of sprinklers in 3/4" female thread the shopping list **Oscillating Pop-up** Width of spray Art. No. Number Sprinkler OS 140 8220 Connecting: 3/4" female thread Turbo-driven Pop-Planning Distance between Sector Art. No. Number up Sprinkler T 100 70-360° range sprinklers 8201 Connecting: Approx. 5–8 m 1/2" female thread 4-5.5 m Turbo-driven Pop-Distance between Art. No. Number Planning Sector up Sprinkler T 200 8203/1539 sprinklers 25-360° other areas from 150 m² Radius: Connecting: Approx. 7.5-10 m 5 - 7.5 m1/2" female thread Turbo-driven Pop-**Planning** Distance between Sector Art. No. Number up Sprinkler T 380 8205/1551 range Radius: sprinklers 25-360° Connecting: Approx. 9-15 m 3/4" female thread 6-10.5 m Pop-up Sprinkler S 80 **Planning** Distance between Sector Art. No. Number sprinklers range  $5 - 360^{\circ}$ 1569 other areas up to 150 m² (pop-up height Approx. 4–7 m 100 mm) 2.5-4.5 m Connecting: 1/2" female thread Pop-up Sprinkler Sector Art. No. **Planning** Distance between Number \$ 80/300 range Radius: sprinklers (pop-up height 300 mm) Approx. 4-7 m2.5-4.5 m for taller plants Connecting: 3/4" male thread

# 3. Calculating the supply lines

## Connection value of the water tap

You must determine the connection value of your tap so that you know how many sprinklers you can connect to each supply line.
Turn on the tap to which you

Turn on the tap to which you are planning to connect your irrigation system. Make sure that the tap is turned on full. Fill a 10-litre bucket. Measure the time in seconds it takes to fill the bucket.

If you are planning to operate your irrigation system using a pump, connect a piece of 19 mm (3/4") hose approximately 1 m in length to the pump using a GARDENA "Profi" System Connector Set (Art. No. 1505) to measure the filling time.

### Add additional time for distance

Measure the distance between the tap/pump and the sprinkler that is furthest from the tap/ pump. Add 1 second to the filling time for each 25 m between the tap/pump and the furthest sprinkler. With a filling time of under 14 seconds and the use of a Water Computer, an automatic Water Distributor or a 2- or 4 Channel Water Distributor (see p. 10), an additional 3 seconds are to be added to the filling time. Find the correct filling time in the table and enter your connection value in the white box. **Example:** (without Water Computer)

Distance 20 m	
11 seconds co to a connection	
Seconds	Connection value
-9 10-13 14-19 20-24 25-30	100 80 60 40 20
Your connecti value =	on 80

Filling time in seconds = 10

#### **Supply lines**

To calculate the number of lines, first of all mark the individual sprinklers in your planning sketch using the sprinkler consumption values on page 7. Do not connect more sprinklers to a line than add up to the connection value you determined in step 3. Add up the individual

consumption values for the sprinklers. Then enter the total of the sprinkler consumption values per section including the length of the pipe in the table "Total sprinkler consumption values per section" (p. 7). At the same time, draw the pipelines, starting at the water supply (e.g. tap, pump) in your plan and transfer the pipe lengths


you have calculated to the "Pipe length" table on p. 7.

Note: With the AquaContour automatic, not more than 1 sprinkler can be connected to a supply pipe.
Reason: As the pressure conditions change with the sector setting an accurate programming of several AquaContour automatic


sprinklers within one supply pipe is not possible.

Important: Always include separate pipelines for pop-up sprinklers (S models), turbodriven pop-up sprinklers (T models) and oscillating pop-up sprinklers (OS models) because they produce different levels of precipitation.

Enter sprinkler consumption values from page 7 and draw in supply lines.

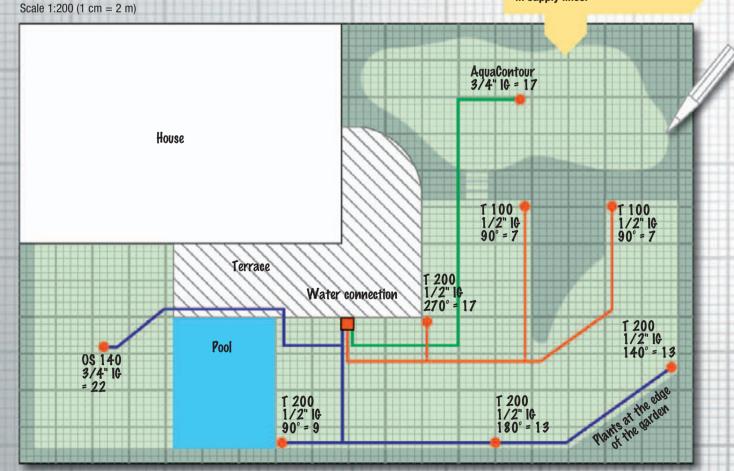

Add up the consumption	values for the sprinklers belo	ow		
	25-90°	91-180°	181-270°	271-360°
T 380	= 15	= 20	= 25	= 30
T 200	= 9	= 13	= 17	= 20
T 100	= 7	= 10	= 14	= 17
\$ 80/300	= 13	= 21	= 29	= 35
\$ 80	= 9	= 17	= 25	= 32
OS 140	= 22			

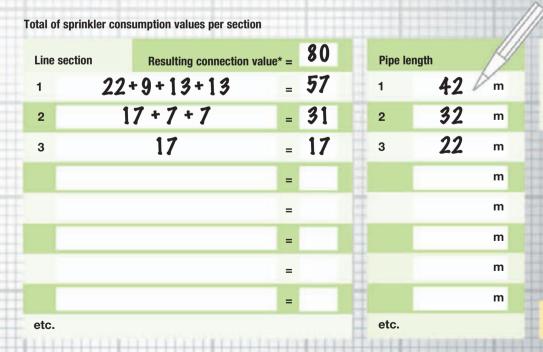

AguaContour automatic

\* This value may not exceed the added together sprinkler consumption values of a pipeline section!

Enter the pipe lengths calculated in the shopping list.


6 Scale 1:200 (1 cm = 2 m)

# 4. Connecting the pipes

Art. No. 2773

#### Possible pipe connections:

Art. No. 2775

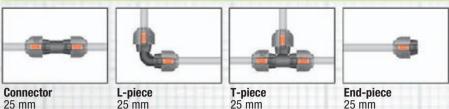


Art. No. 2771

Connector

L-piece

T-piece

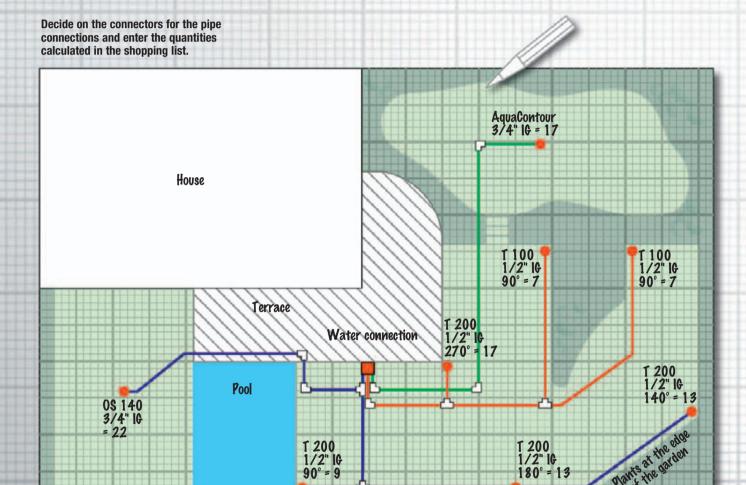

Art. No. 2778


# 5. Connecting the sprinklers



Use T-piece 25 mm 1/2" male thread Art. No. 2786 3/4" male thread Art. No. 2787

Connecting Pop-up Sprinkler S 80/300: Use T-piece with 3/4" female thread 25 mm Art. No. 2790

Now decide on the connecting components for the sprinkler connections and enter them in the shopping list.

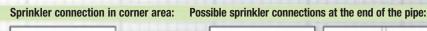


With Angle Piece 25 mm 1/2" male thread Art. No. 2782 3/4" male thread Art. No. 2783



Use L-piece 25 mm 1/2" male thread Art. No. 2780 3/4" male thread Art. No. 2781

Connecting Pop-up Sprinkler S 80/300: **Use Connector** with 3/4" female thread 25 mm Art. No. 2761

Warning: Ensure when you select the sprinkler connection components that the thread sizes match the sprinkler threads shown on your plan. So in this example it would be an L-piece 25 mm. Art. No. 2781 with 3/4" male thread.

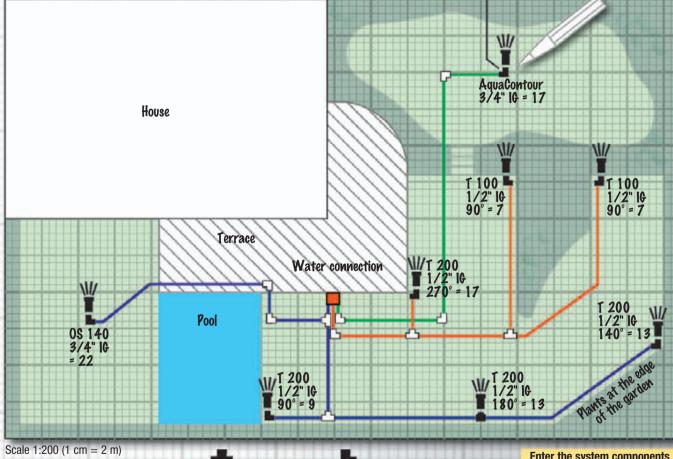

Symbols for sprinkler connections: T piece with thread

**Enter the system components** calculated in the enclosed shopping list.

# 6. Frost protection / drain valve

#### In the pipeline:



T-piece 25 mm 3/4" female thread Art. No. 2790 with Drain Valve Art. No. 2760

#### At the end of the pipe:



Connector 25 mm 3/4" female thread Art. No. 2761 with Drain Valve Art. No. 2760

## Note:

To protect the system from frost damage, place drain valves at the lowest points of the individual pipelines. Note installation tips on page 13.

Scale 1:200 (1 cm = 2 m)

Symbols for pipe connections:

# 7. Connection possibilities



#### Manual control

Connection to the tap is made via a Connecting Point (Art. No. 2722) with Connector 25 mm x 3/4" female thread (Art. No. 2761), a "Profi" Connector Set (Art. No. 1505) with 19 mm (3/4") garden hose or a Connection Set (Art. No. 2713).


**Note:** Connection Pieces (Art. No. 1512, 1516, 1517, 1518) are available with different sized threads (see shopping list) for connecting your irrigation system directly to the domestic water supply (please observe installation instructions).



#### **Multi-connection**

Several supply lines can be connected using the Twin-Tap Connector (Art. No. 8193) or the **Four Channel Water Distributor** (Art. No. 8194).

As an alternative to the distributors, the individual supply lines can be manually operated via Regulatorand Shut-off Valves.

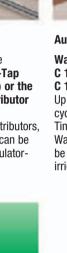



#### **Automatic control**

**Water Computer** C 1060 plus, C 1060 solar plus

Up to 6 programmed irrigation cycles per day. Alternatively Water Timers T 1030/T 1030 plus or Water Computer C 1030 plus can be connected to control a single irrigation line.



#### **Multi-control**

Water Computer C 2030 duo plus

Control of two irrigation lines

**Water Distributor automatic** Control of up to 6 irrigation lines in combination with the Water Computer C 1060 plus or C 1060 solar plus.



# and automatic control



#### Direct programming


For fully automatic, cablefree control of any number of irrigation lines. Up to 6 programmed watering sessions per day and per

**Programming Unit** for programming the Controller. The Controller is mounted on the Irrigation Valves 9 V. The Soil Moisture Connector Art. No. 2762. Sensor and Rain Sensor can be connected as optional extras.

#### Valve Box V1 and V3 For installing 1 or up to 3 Irrigation Valves

underground. Telescopic screwconnection makes it easy to install and remove the valves. With 1" male thread

Pipe connection via 1" Irrigation Valve 9 V For programming the watering system directly. Energy-saving electromagnetic technology.

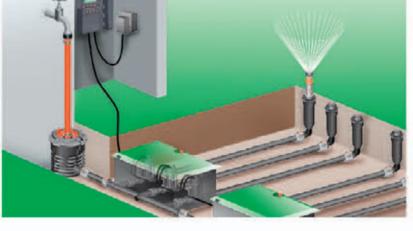

#### **Watering control** by cable

Fully automatic control of up to 12 irrigation valves/ lines. Cable connection to the valves

Also suitable for automatic operation of a pump, e.g. for economical use of rainwater

#### **Irrigation Control System** 4040 modular

For connection of up to 4 24 V Irrigation Valves. Suitable for indoor and outdoor use.

4 programmes per valve possible. Can be extended with Expansion Module 2040 for up to 12 valves.

### **Expansion Module 2040**

Plugs into Irrigation Control System 4040 modular. Connection of up to 2 24 V Irrigation Valves.

#### **Irrigation Control Systems** 4030 and 6030

For use indoors or in rainprotected areas, control up to 4 or 6 Irrigation Valves 24 V.

24 V Irrigation Valve Manual opening/closing possible. Self-cleaning fine filter for uninterrupted control technology.

24 V Connection Cable Length 15 m. Connection of up to 6 24 V Irrigation Valves.

### 24 V Cable Clip

For connecting the Connection Cable to the Valve Box V1. Valve Box V1 and V3

#### For underground installation of 1 or up to


3 Irrigation Valves. Telescopic screw connection for simple fitting/removal of the valves. Valve Box V3 with cable connection box protected from water for simple. clear 24 V-cable connection. With 1" male thread. Pipe connection via 1" connector Art. No. 2762

#### 24 V Pump Control System

With 10 m cable. For pumps up to 2000 W.



#### **Connecting Point** For supplying water to the underground irrigation system. Art. No. 2722

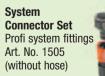

**Connection Set** 2 m garden hose 19 mm (3/4") with Profi system fittings

Connector Art. No. 2761/ 2762/2763











**Water Computer** 









# Shopping list

Art. No. Description

1569

**Pop-up Sprinklers** 

Pop-up Sprinkler S 80

Quantity

### Note:

If you require a connection which is permanently stable under pressure between the water tap and the connecting point with a drain valve downstream to protect the pipeline, use Tap Connector Art. No. 1513

Enter connection and control material in the white boxes and transfer to the shopping list

	Top up optimized to co
1566	Pop-up Sprinkler S 80/300
8201	Turbo-driven Pop-up Sprinkler T 100
8203	Turbo-driven Pop-up Sprinkler T 200
8205	Turbo-driven Pop-up Sprinkler T 380
8220	Pop-up Oscillating Sprinkler OS 140
1559	Large-Area Pop-up Irrigation AquaContour automatic
	Sprinkler Connection
2780	L-piece 25 mm x 1/2" male thread
2781	L-piece 25 mm x 3/4" male thread
2782	Angle Piece 25 mm x 1/2" male thread
2783	Angle Piece 25 mm x 3/4" male thread
2786	T-piece 25 mm x 1/2" male thread
	·
2787	T-piece 25 mm x 3/4" male thread
	Supply Line:
2718	Connecting Pipe 25 mm, 10 m
2700	Connecting Pipe 25 mm, 25 m
2701	Connecting Pipe 25 mm, 50 m
	Connecting Pieces:
0771	_
2771	T-piece 25 mm
2773	L-piece 25 mm
2775	Connector 25 mm
2778	End-piece 25 mm
2761	Connector 25 mm x 3/4" female thread
2762	Connector 25 mm x 1" female thread
2763	Connector 25 mm x 1" male thread
2790	T-piece 25 mm x 3/4" female thread
	•
2760	Drain Valve
8250	Water Connector
	System Connection:
1510	
1513	Adapter Piece 26,5 mm (G3/4")/33,3 mm (G1")
1505	"Profi" System Connector Set
2713	"Profi" Maxi-Flow System Connection Set
2722	
	Connecting Point
8193	Twin-Tap Connector
8194	Four Channel Water Distributor
2724	Regulator and Shut-off valve
	-
1510	Central Filter
	System Control:
1107	Water Distributor automatic
1197	
1866	Water Computer C 1060 solar plus
1864	Water Computer C 1060 plus
1874	Water Computer C 2030 duo plus
1862	Water Computer C 1030 plus
1860	Water Timer T 1030 plus
1825	Water Timer T 1030 D
1835	Automatic Watering Set A 1020 Sensor
1189	Rain Sensor electronic
1188	Soil Moisture Sensor
1186	Extension Cable for Rain- and
1100	
	Soil Moisture Sensor, 10 m
1242	Programming Unit
1250	-
	Controller
	Controller Volve Rev. Vd.
1254	Valve Box V1
1254 1255	Valve Box V1 Valve Box V3
1254 1255 1251	Valve Box V1 Valve Box V3 Irrigation Valve 9 V
1254 1255 1251 1283	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030
1254 1255 1251	Valve Box V1 Valve Box V3 Irrigation Valve 9 V
1254 1255 1251 1283	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030
1254 1255 1251 1283 1284 1276	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular
1254 1255 1251 1283 1284 1276	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040
1254 1255 1251 1283 1284 1276	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040 Irrigation Valve 24 V
1254 1255 1251 1283 1284 1276	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040
1254 1255 1251 1283 1284 1276 1277 1278 1280	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040 Irrigation Valve 24 V 24 V Connection Cable, 15 m
1254 1255 1251 1283 1284 1276 1277 1278 1280 1282	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040 Irrigation Valve 24 V 24 V Connection Cable, 15 m 24 V Cable Clip (Contents: 6 clips)
1254 1255 1251 1283 1284 1276 1277 1278 1280	Valve Box V1 Valve Box V3 Irrigation Valve 9 V Irrigation Control System 4030 Irrigation Control System 6030 Irrigation Control System 4040 modular Expansion Module 2040 Irrigation Valve 24 V 24 V Connection Cable, 15 m





# Installation tips



Lay out all the parts of your irrigation system according to your plan. Begin by installing the parts at the start of the system.



Cut the pipes to the correct length and connect the components. Make sure you keep soil out of the ends of the pipes.


When connecting, push the pipes over the o-ring in the connection part (insert pipe approx. 6 cm in the connection part). Only this way, a non-leaking connection is ensured. Deburr pipe before, if necessary.



Set the spray direction, sectors, and the range of the sprinklers. Test the system **before you install it under ground**.



Dig a spade into your lawn to mark out a V-shaped trench approx. 20–25 cm deep. Carefully remove the turf and dig out the trench. Remove any stones from the trench. Mowing and watering your lawn beforehand will make it easier to install your irrigation system.

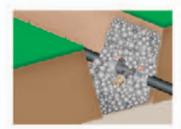

Install the drain valves at the lowest points of the system. On slopes, the height difference between the different drain valves must not exceed 2 m. Install several drain valves on slopes if necessary. To improve drainage and to protect the drain valve underlay it with a seeping water drain packing (washed, coarse gravel, approx. 20 x 20 x 20 cm).



Lay the network of pipes with the sprinklers and other components connected in the trench. To avoid damaging your irrigation system when mowing your lawn, for example, all sprinklers, Connecting Points, and Water Connectors must be installed slightly below the surface to allow for settlement.



Fill in the trench with soil, roll out the turf and tread down. Watering the trench and lawn beforehand will help the grass take root more quickly.



Changing from the previous to the new system

For changing from the 19 mm inner diameter connecting pipe to the 25 mm outer diameter pipe, use the Adapter Piece Art. No. 1513 combined with the Connector 25 mm x 1" male thread Art. No. 2763.

Disconnect your irrigation system from the supply line before the first frost sets in. Observe the notes on frost protection for the individual products.

If the irrigation system receives its water supply via a pump, it can happen that sand enters the pipeline system and impairs the function of the sprinklers. Therefore the pump should always be used in combination with a filter upstream of it.

The sprinklers and pipes are approved for an operating pressure of up to 6 bar. If the water pressure is higher, a pressure reduction unit must be fitted.

For questions regarding correct connection to the domestic water supply network, please ask your local sanitary works specialist. Note: If you want to release the screwed fastening of the pipe connectors completely, you may turn past the stop (position "open") of the screwed fastening e.g. if you use pipe pliers. This will not impair its subsequent ability to function.

# All you need to know about Watering Systems

Would you like an individual watering system in your garden and you're not sure what you need for this? In addition to this planning brochure, GARDENA offers you several options:

- on the GARDENA website you will find the watering planner with which you can arrange your own individual Sprinklersystem or purchase what you need for your Micro-Drip-System right away online.
- refer to our GARDENA customer service for comprehensive information on Watering Systems.
- you can receive planning and installation tips, as well as live videos of the products from the DVD Watering Systems. This is available for 4.99 € (incl. VAT and shipping) through our replacement part service at ++ 49 (0)731 490-123 (Art.-No. 47200-00).

As we do not carry out the installation ourselves, we ask for your understanding that we do not assume any liability or guarantee for costs and damages possibly arising during implementation of the planning.

Should you be interested in our planning- and/or installation service, please contact us directly or ask your trader.

GARDENA
Deutschland GmbH
89070 Ulm
Telefon (0731) 490-246
Telefax (0731) 490-389
E-Mail: service@gardena.com
www.gardena.de

